

FRONT SEAT COVER FITTING INSTRUCTIONS

Dear Customer,

Thank you for purchasing a Custom Fit Car Seat Covers from Coverworld, which has been manufactured from high quality fabrics. If for any reason you are having difficulty in properly fitting the seat cover, please call our helpful customer service team on: (07) 5493 1400

FITTING STEPS



1. Identify Each Piece
2. Seat Preparation
3. Fitting Base Cover
4. Fitting Back Rest Covers
5. Fitting Head Rests

ALLOW SUFFICIENT TIME



Custom Fit Seat Covers are tailored to fit, so we recommend allowing the right amount of time to fit the covers properly. Fitting involves more than slipping the covers on. It is important to align the seams of the covers to the edges of seats and position and tuck the covers in at the edges and side skirts, this will make a big difference to the fitment. Ensure this is done before you proceed to fasten the covers to keep them in place.

It is important to understand each fitment can be a little different. As a general rule we suggest allowing 30 minutes for each row of seating, this means approximately 15 mins for the drivers, 15 mins for the passenger front seat and 30 minutes for each of the middle and/or rear seats.



CAUTION

Use caution when feeding straps through under seat, sharp edges could be present.

AIRBAG DISCLAIMER:

⚠️ IMPORTANT AIRBAG INFORMATION


This product is suitable for cars with airbags. Correct initial fitting & securing of this seat cover to your vehicle is essential to allow deployment of seat airbag. Incorrect fitting can prevent the seat airbag from being correctly deployed.

The driver & passenger side seat cover must be fitted to the correct side.

These seat covers must only be used for cars that have an integrated side airbag where the unfolding of the airbag takes place using an inflation control seam. The airbag deploys from the centre of the side of the seat closest to the car door. (Please note the "airbag deployment zone" in the illustration). The seam is located in the area from forward edge (A) to the outside rear edge (B) of the seat back.

If the seat cover is moved from its intended placement for any reason, you must ensure it is placed in its correct position before use. See illustration and fitting instructions.

If for any reason the side airbag fails to open, the manufacturer will not be held responsible.

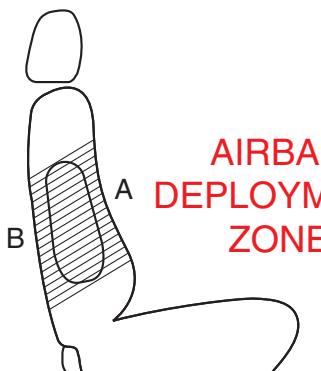


THIS MADE TO
ORDER SEAT COVER IS
PATTERN NO:

PLEASE SEE OVER PAGE

FRONT SEAT COVER FITTING INSTRUCTIONS CONTINUED


1. IDENTIFY EACH PIECE

Unpack the covers and lay out to identify each piece before you fit them. You can line up seat belt holes visually. If your vehicle has seat integrated side airbags identify the air bag allowances on the back rests. Next look for the base label - DRIVER or PASSENGER. Often the bases may look the same but there are slight differences to the measurements.

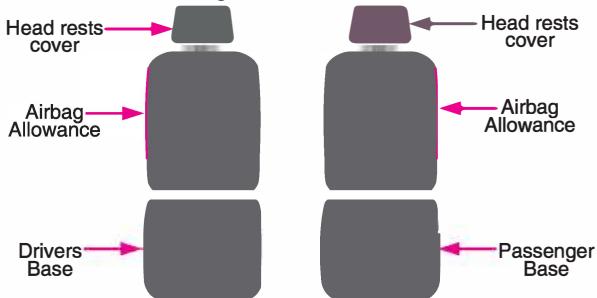


2. SEAT PREPARATION

Remove Head Rests

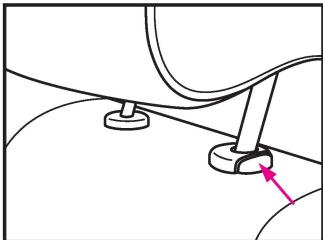

1. Depress button

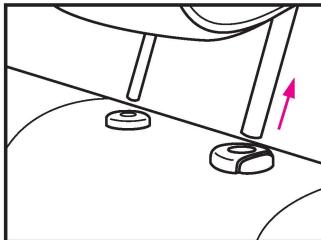



2. Slide out head rest

Note some head rests might require an additional step to disengage the headrest from the seat. Check owners manual for more information.

3. FITTING BASE COVER


Unhook Flap

Many modern vehicles today have a protective flap at the base of the backrest. If your vehicle has one this needs to be temporarily moved out of the way to feed through the ties.

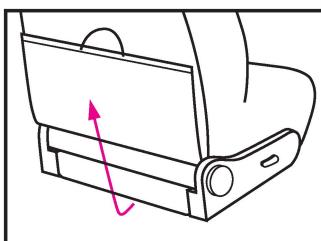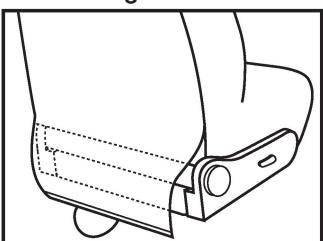



Fit the base cover by aligning the seam edges with the edge of the seat, push the ties and back base section between the base and the backrest of the seat so the ties can be accessible from the rear of the seat. Once the ties are threaded through remove the red material from the touch tape section of the tie.

As per the diagram, align ties and fasten together. Tuck or cut away excess ties.

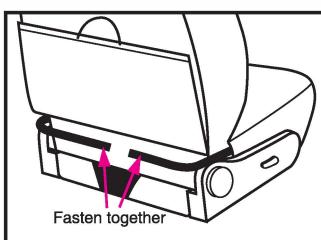



Remember to not obstruct seat guides when securing ties.

4. FITTING BACK REST COVERS

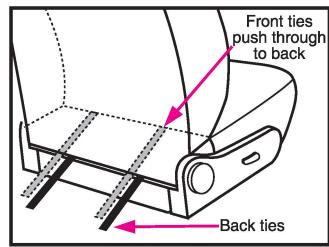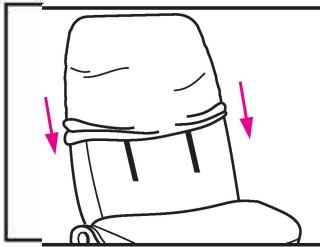

Fit the backrest section of the seat cover by sliding it down back and forth until the top of the cover reaches top of the seat. Align seams with edge of seat, fit so face panel is not twisted and smooth out fabric against seat to reduce creases. Ensure airbag allowances are positioned correctly. Feed the front ties through backrest and seat base so the ties can be connected at the rear of the seat by tying a bow.


Tying Back Rest Covers

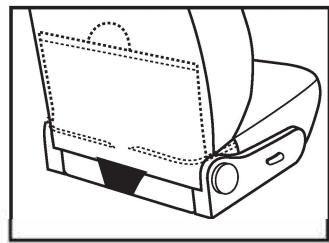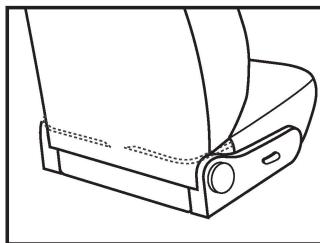

At this stage of fitment you can choose to replace the flap and feed the ties either side of the flap.

OR leave the flap folded up inside the seat cover and tie the front backrest ties to the rear backrest ties.

5. FITTING HEAD RESTS

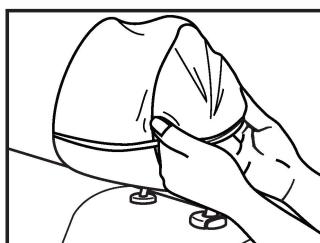

Refit head rest into the seat before fitting the head rest cover. Slide head rest cover on from side to side and smooth any wrinkles.

Custom Fit Seat Covers will provide years of protection for your car seats. To get the best out of your seat covers below are some important tips:

1. Properly fitted seat covers will not slip and slide and will last longer than poorly fitted seat covers.
2. The ties are designed to keep them in place, they do not need to be over tensioned.
3. Tuck and tidy straps, consider if you cut ties it might be hard to fit again if you wash your covers.
4. After 1 month it is recommended to re-tension ties if required.

Thank you for choosing Made to Order Seat Covers.



SEAT COVER FITTING INSTRUCTIONS - MIDDLE AND REAR ROWS

Dear Customer,

Thank you for purchasing a Custom Made Car Seat Covers, which has been manufactured from high quality fabrics. If for any reason you are having difficulty in properly fitting the seat cover, please call our helpful customer service team on: (07) 5493 1400.

FITTING STEPS



1. Identify Each Piece
2. Seat Identification & Preparation
3. Fitting Base Cover
4. Fitting Back Rest Covers
5. Fitting Head Rests

ALLOW SUFFICIENT TIME



Custom Seat Covers are tailored to fit, so we recommend allowing the right amount of time to fit the covers properly. Fitting involves more than slipping the covers on. It is important to align the seams of the covers to the edges of seats and position and tuck the covers in at the edges and side skirts, this will make a big difference to the fitment. Ensure this is done before you proceed to fasten the covers to keep them in place.

It is important to understand each fitment can be a little different. As a general rule we suggest allowing 30 minutes for each row of seating, this means approximately 15 mins for the drivers, 15 mins for the passenger front seat and 30 minutes for each of the middle and/or rear seats.




CAUTION

Use caution when feeding straps through under seat, sharp edges could be present.

1. IDENTIFY EACH PIECE

Unpack the covers and lay out to identify each piece before you fit them. You can line up seat belt holes visually.

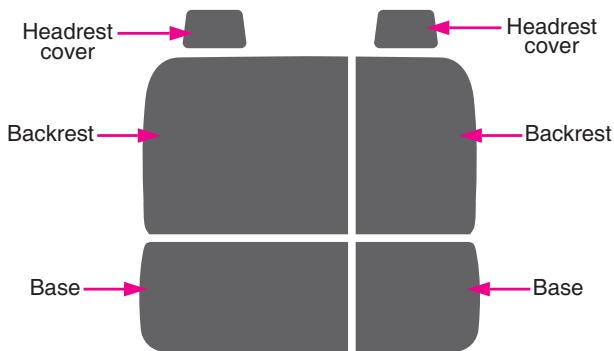


THIS MADE TO ORDER SEAT COVER IS PATTERN NO:


PLEASE SEE OVER PAGE

2. SEAT IDENTIFICATION


Middle & rear seat configurations vary considerably from vehicle to vehicle. Some of the more common configurations are illustrated below. It is important to identify your type, don't worry if yours is not listed here, your pattern will match your vehicles configuration.

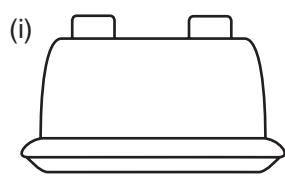


Full Bench

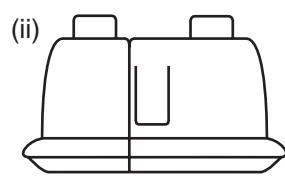

40/60 Split

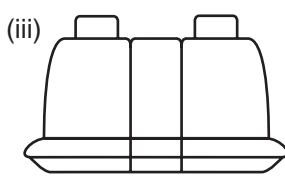

40/20/40 Split

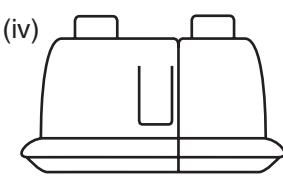



60/40 Split

Once you have determined your seating configuration please refer to the correct fitting instructions. Generally there are one of 2 options: split fold and full bench seats.

MIDDLE & REAR SEAT COVER FITTING INSTRUCTIONS CONTINUED

OPTION 1 - SPLIT FOLD SEATS

 In most cases split fold seats do not require to be removed from the vehicle to fit the seat covers as the base and backrest sections tilt on a hinge making for easy fitment. Simply locate the seat release mechanism, usually found at the front of base sections and top of backrest sections. Example below (Fig 1):

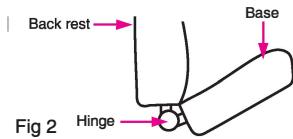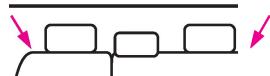

With the base elevated (Fig 2) fit the seat cover. There is no need to remove the base from the car with these configurations.

FITTING BASE COVER

Fit the base cover by aligning the covers seam edges with the edge of the seat, from underneath align ties and tie them together using a bow as pictured.

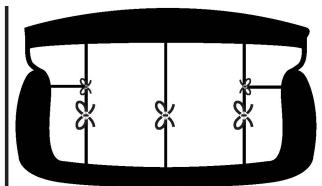


Fig 3

REMOVE HEAD RESTS

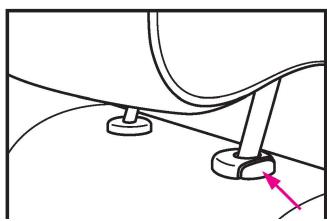


Fig 4

1. Depress button



Fig 5

2. Slide out head rest

Note some headrests might require an additional step to disengage the headrest from the seat. Check owners manual for more information.

FITTING BACK REST COVERS

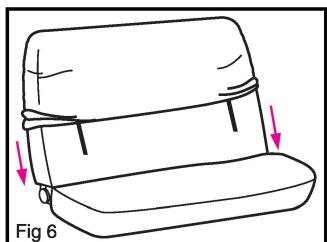


Fig 6

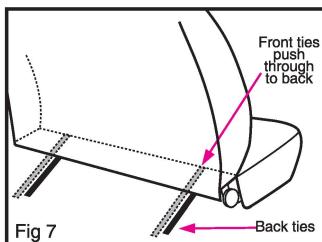


Fig 7

Fit the backrest section of the seat cover by sliding it down back and forth until the top of the cover reaches top of the seat. Align seat cover seams with the edge of seat and line up rear armrest and seat belt receiver allowances before fastening with the ties. Ensure the front face panel is not twisted and smooth out the fabric against the seat to reduce creases (Fig 6). Feed the front ties through backrest and seat base so the ties can be connected at the rear of the seat by tying a bow (Fig 7).

FITTING HEADRESTS

Refit headrest into the seat before fitting the headrest cover. Slide headrest cover on from side to side and smooth any wrinkles.

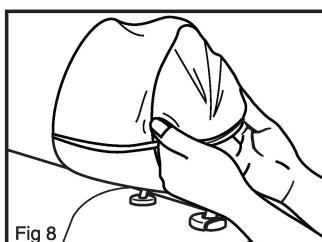


Fig 8

INTEGRATED SEAT BELTS


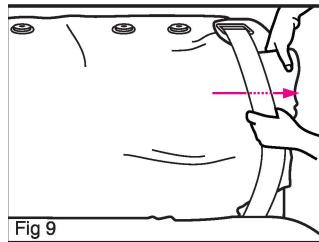


Fig 9

 

Fig 10

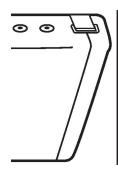

Some vehicles have integrated seat belts. To fit the seat cover separate the velcro section before sliding the cover over the seat. The velcro section allows the cover to be passed through and behind the seat belt and then fastened on the rear side of the backrest.

OPTION 2 - FULL BENCH

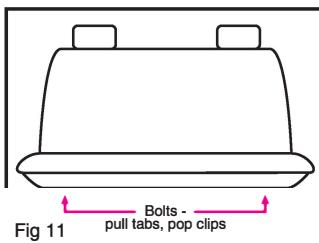


Fig 11 Bolts - pull tabs, pop clips

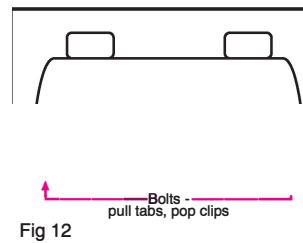


Fig 12 Bolts - pull tabs, pop clips

A full bench seat will usually require to be removed from the vehicle to fit the seat covers.

Fastening points may include bolts, pull tabs or pop clips. These are usually located at the front of the base section. Note: Pop clips can require some force to disengage and re-engage. Once the base is removed the backrest fastening points will be visible, repeat the process. If the backrest is hinged removal is not required as it can be tilted forward to fit the covers.

FITTING BASE & BACKREST SECTION

Remove headrests (See Fig 4 & 5).

Place a drop cloth on the ground, next to vehicle to place the seats on to fit the covers. This will protect seats from getting scuffs & abrasions when fitting the covers.

Fit the base cover by aligning the seams of the cover with the edges of the seat, match up the allowances for headrest and seat belt holes. Secure the covers by aligning the ties underneath the seat base and tying with a bow.

Repeat for backrest cover and refit to vehicle.

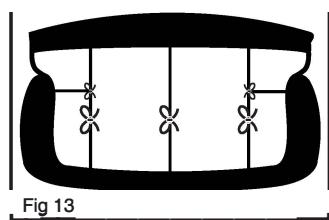


Fig 13

Custom Fit Seat Covers will provide years of protection for your car seats. To get the best out of your seat covers below are some important tips:

1. Properly fitted seat covers will not slip and slide and will last longer than poorly fitted seat covers.
2. The ties are designed to keep them in place, they do not need to be over tensioned.
3. Tuck and tidy straps, consider if you cut the ties it might be hard to re-fit again if you decide to wash your covers.
4. After 1 month it is recommended to re-tension ties if required.