

# Fitting Instructions

CONTENTS



NOTE: Number of Tie-downs will vary according to the size of your cover.




1. Locate front of Cover. (Tag indicates front.)



2. Fit front end of cover over Bow and unroll over Boat.




3. Thread Tie-down through Webbing Loop and around Trailer. (webbing loops sewn at intervals around cover edge.)

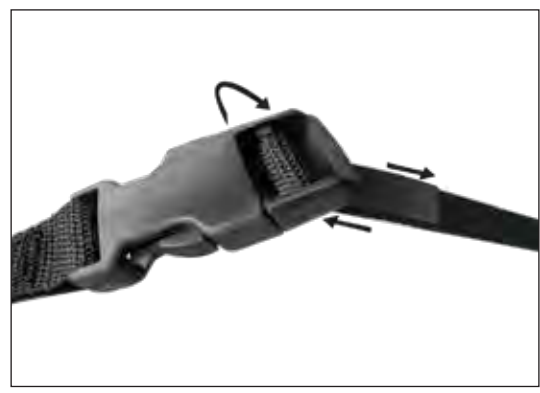

4. Thread end of Webbing through Buckle.



5. Repeat steps 3 & 4 on all Webbing Loops.

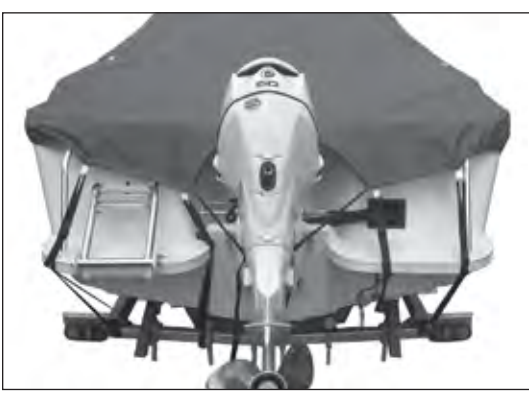

6. Thread Hem Webbing through Camlock Buckles and pull through evenly.



7. Tighten all Buckles.



8. Thread Trailing Straps through Webbing Strips and around boat. Tighten. (Webbing strips located at intervals on top of cover).

NOTE: Due to product upgrdde, please refer to these instructions when fitting your cover.